



Splitboard Skins Tail Clip Kit



KIT INCLUDES

- (2) Aluminum Tail Clips
 - (6) Stainless Steel Rivets
 - (2) Sticker Templates
 - (2) Tail Attachments
 - (2) 15" Tail Straps
- Pair Weight: 72g/2.5oz

Spare Skin Tail Straps available
in both 10" and 15" lengths.



7 59948 90942 4

voile.com

REQUIRED TOOLS

Pliers & Razor Knife/Box Cutter
Butane Torch
Framing Nail or Screw
Ball-Peen Hammer



Before you do anything, it is important to determine your desired skin length by test fitting the tail attachments to your board. You must allow enough room for the strap to properly apply tension to the tail clip. If you intend on using one pair of skins for multiple boards, before cutting, check to make sure the tail clip kit will properly fit both boards (Figure 6).

***Voilé recommends skinning with your board halves opposed so the aluminum tail clips do not make contact with each other.**

1. Cut out the two sticker templates and place them on the appropriate skin on the plush side. Justify the sticker to the straight inside edge of your skin. Press firmly. **DO NOT STICK TO THE GLUE SIDE.**

2. In a well ventilated area, holding the nail with a pair of pliers, heat with a butane torch until it is red-hot. Center the heated nail over the middle hole and slowly force through the template and skin. Once the nail is through both the template and skin, slowly widen the hole in a circular motion. Repeat this for the two outside holes.

3. With the template still affixed to the skin, cut out the square notch with a razor knife. Remove the template and gently cut off any excess material that has melted to either side of the skin. (Figure 1)


4. Test fit the tail attachment, paying particular attention to the two rectangle cut aways. The larger rectangle should face the glue side of the skin. Now test fit the rivets. If the rivets are impeded by any skin material, repeat step two until each rivet can slide in and out easily. If you cannot align the holes easily, gently cut a small amount off of the tail. (Figure 2)

5. On a hard surface, starting with the center rivet, place the conical side of your Voilé Slider Pin into the open side of the semi-tubular rivet and gently begin to round the ends. Make sure to flip the locking bail over before hammering, if you don't you will destroy the bail. Repeat this for the other two rivets. (Figure 3)

6. Using the ball-peen side of the hammer, continue to gently round the heads. **TAKE YOUR TIME.** Now flip the skin over and gently hammer the head of each rivet until it clinches the tail attachment. (Figures 4 & 5)

7. Slide the strap through the larger rectangle cutaway until it snaps into place.

8. Slide on the tail clip and test fit the skins to your board. There should be enough stretch in the strap to allow the tail clip to properly apply enough tension to secure the tail clip in place. (Figure 6)

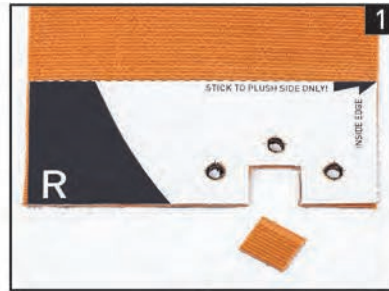

Voilé is not responsible for improper installation, misuse or abuse of this product. This product is warranted by the manufacturer against any defects in materials or workmanship for a period of one year. Warranty service and replacement parts are available directly from Voilé.

